


American Earth Anchors

The best screw you will have in the dirt™

Installation

3" Arrowhead or Bullet

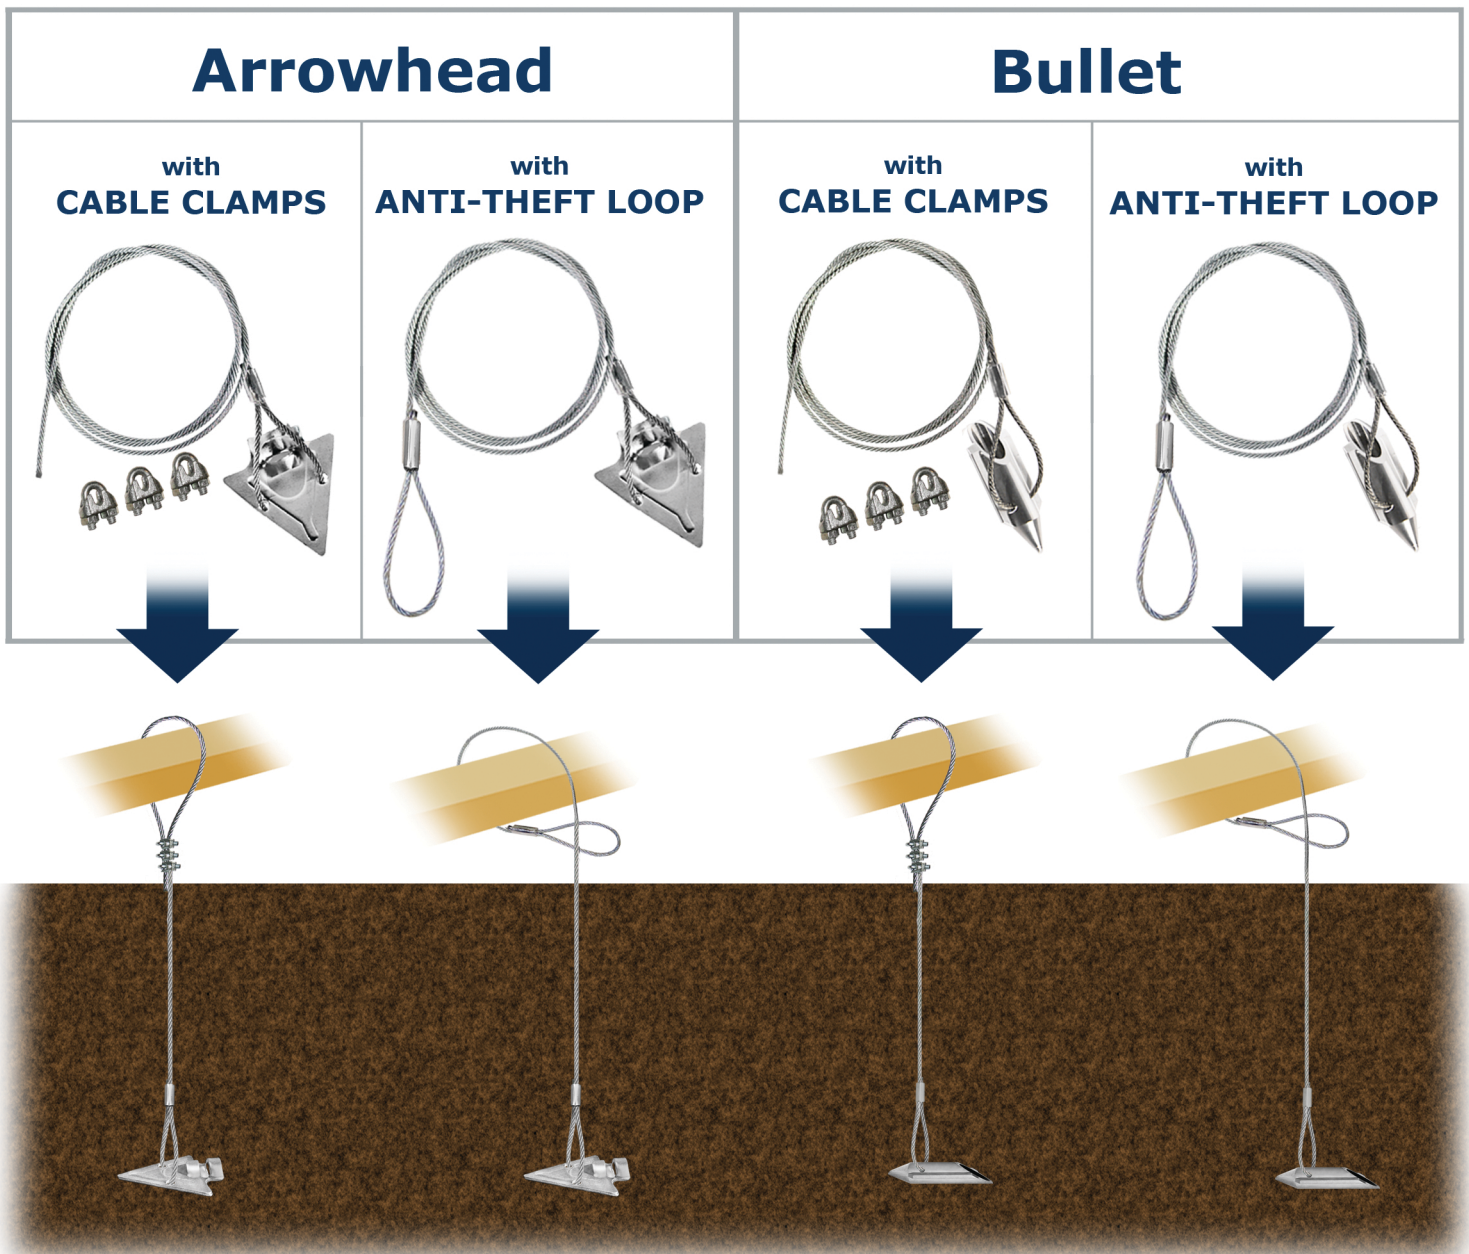

More on the back



americanearthanchors.com

info@americanearthanchors.com

1-508-520-8511






American Earth Anchors

Installation


Continued from front

3" Arrowhead or Bullet with cable clamps or anti-theft loop

Drive rod fits into back of anchor

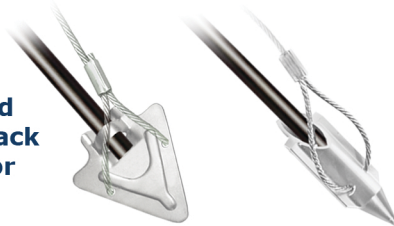

Cable clamps
Correct method

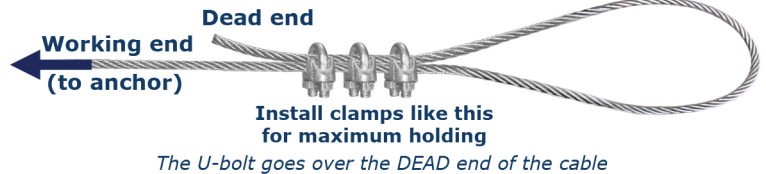


The U-bolt goes over the DEAD end of the cable

Cable Clamps




During locking, anchor will move up as it turns, settles, and locks. Depending on soil type, this can be 1-3 inches.

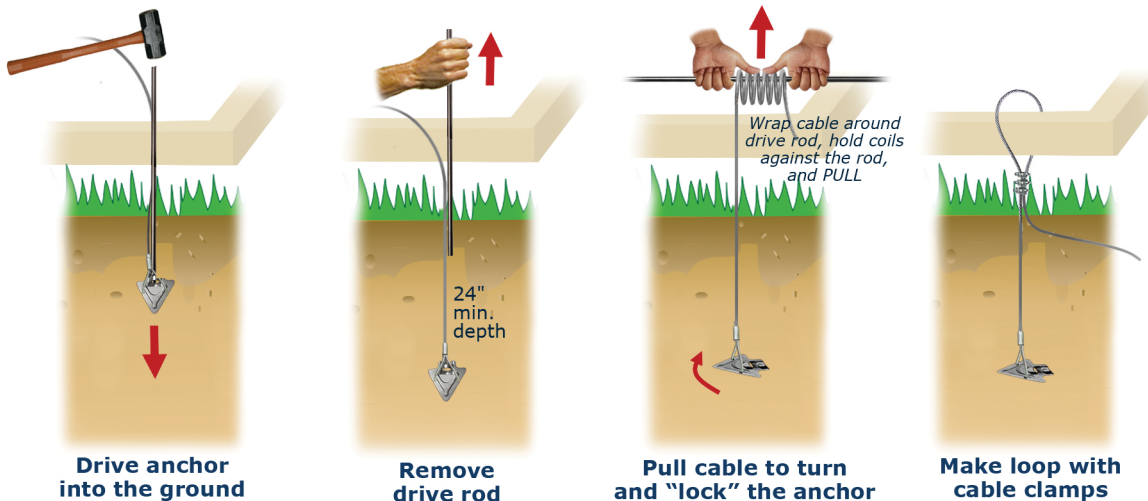

DRIVING METHODS




Sledge hammer

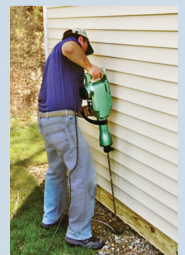

Demolition hammer

Anti-theft Loop

FIRST: Wrap cable around structure and pass anchor through loop

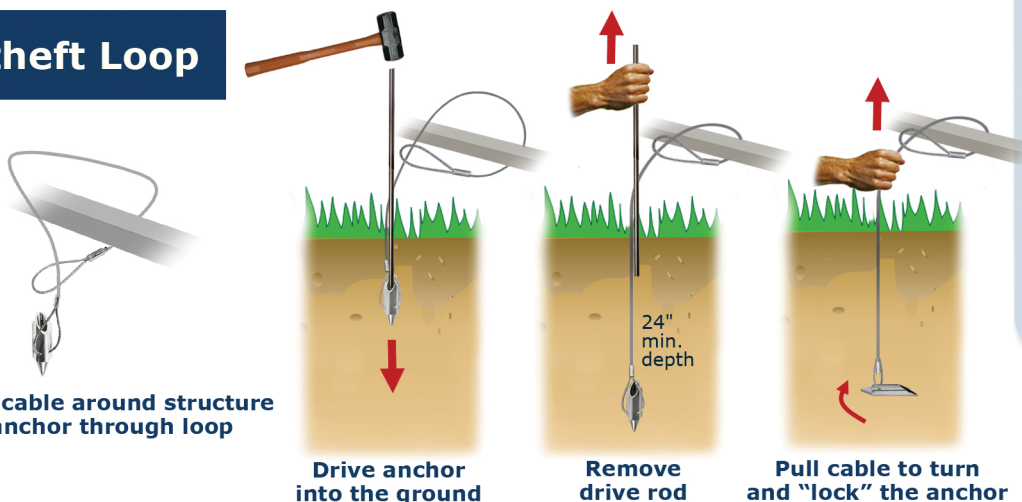

americanearthanchors.com

info@americanearthanchors.com

1-508-520-8511

