

American Earth Anchors

The best screw you will have in the dirt™

Installation

18" or 26" Penetrator®

with tie-off cable or swing set brackets



PE18SQ

Flat top



1/2"
square drive


PE18

Hex top

PE26

Hex top

1"
socket

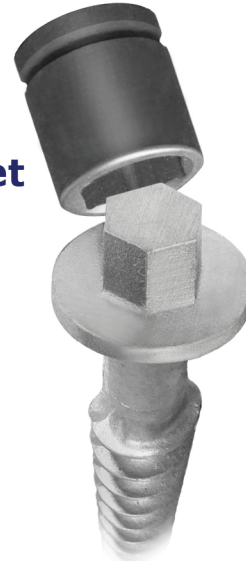

Install with ...



IMPACT WRENCH



Sold separately

T-HANDLE

**More on
the back**



americanearthanchors.com

info@americanearthanchors.com

1-508-520-8511





American Earth Anchors

Installation

Continued from front

18" or 26" Penetrator[®]

Tie-off cable



Tie-off cable can be doubled over to make a larger loop


The tie-off cable will NOT fit over the Penetrator's flange, so the Penetrator must be put through the cable's loops(s) either BEFORE or DURING installation:

Twirl the tie-off cable onto the Penetrator before installation



OR

Install the Penetrator through the tie-off cable

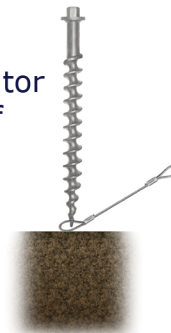

Install **vertically** and **all the way** for full holding strength



Swing set brackets

Vertical Bracket



On 2x4



On 2x6



Slant Bracket



At grade



Below grade



americanearthanchors.com

info@americanea.com

1-508-520-8511

